


6.3 Extended Calibration

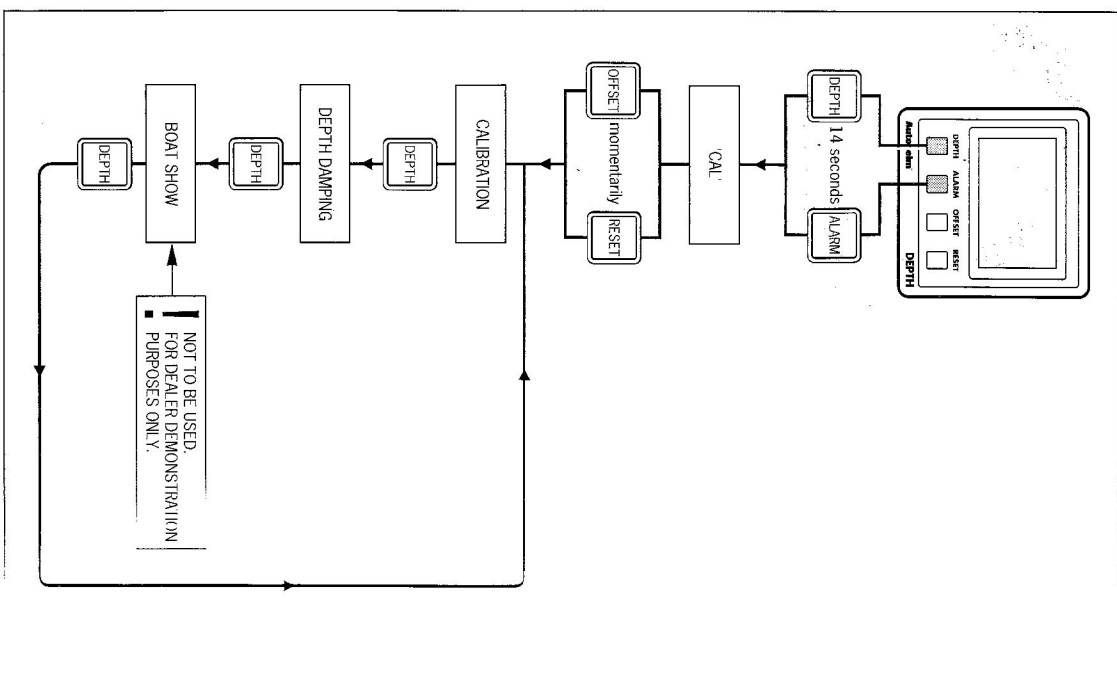

Extended Calibration Notes

All of the extended calibration screens are adjusted using the **OFFSET** and **RESET** keys.

Calibration

Calibration allows you to protect your selected settings. When calibration is enabled the initial and intermediate calibration settings cannot be modified.

CAL 0 = Calibration locked, i.e. no access

CAL 1 = Calibration unlocked, i.e. normal access

Once locked, calibration can be unlocked by entering extended calibration and selecting 1, calibration unlocked.

Depth Damping

Depth damping adjusts the rate at which the display is updated. The default setting is 4 seconds, however, the selectable range is 1 to 15.

Boat Show

The 'Boat Show' mode is a dealer demonstration program only. Under no circumstances must this program be engaged when this unit is installed onboard your vessel.

Exit Extended Calibration

To store the extended calibration settings, press **DEPTH** and **ALARM** for 2 seconds.