




## Catalina 36MKII - Factory Battery Selector Behavior – all loads controlled by selector

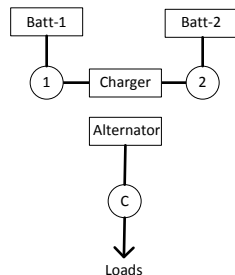


**Wiring diagram**  
(also selector in OFF)

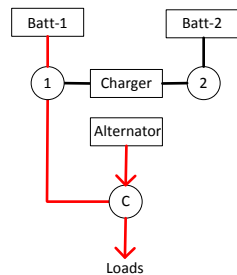

**Selector to 1**  
All loads from batt-1  
Alternator charges batt-1

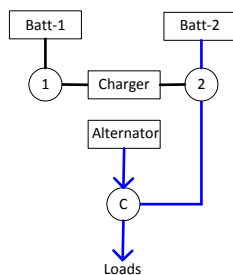


**Selector to 2**  
All loads from batt-2  
Alternator charges batt-2

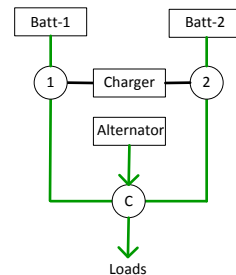


**Selector to ALL or BOTH**  
All loads from batt-1 and batt-2  
Alternator charges batt-1 and batt-2

## Parallel factory batteries (house), add battery in FWD settee (start), keep selector switch, add ACR

(normal = selector position 2, load sources normally decided by ACR, manual parallel capability)

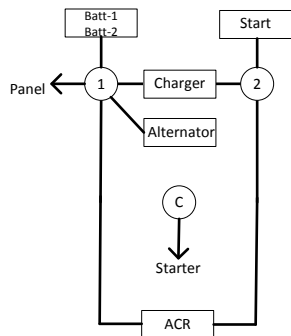

**Wiring diagram**  
(also selector in OFF is safer)

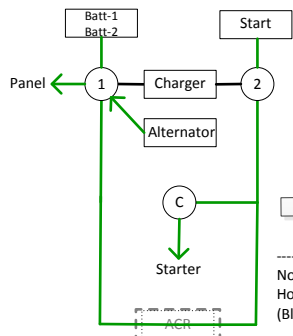


**Selector to 2 (normal)**  
House bank 100% charged  
ACR automatically closes  
Starter draws from both  
Alternator charges both


Depleted

Over Time  
No charging source  
House bank < 12.5 volts  
(Blue Seas ACR specs)

Charged

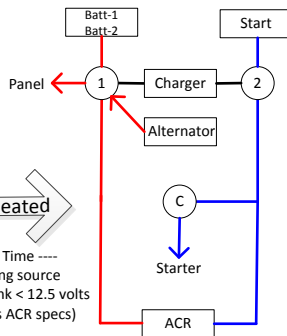


**Selector to 2 (normal)**  
ACR automatically opens  
Starter only draws from 2  
Alternator charges 1 to 100%  
(becomes drawing on the left)

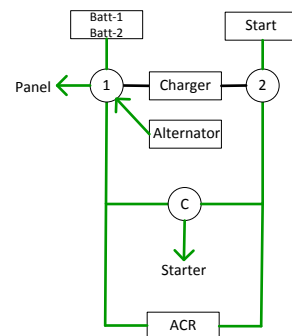

**Selector to BOTH or ALL**  
(Bypass ACR)  
Starter draws from both  
Alternator charges both

## Similar to left, but eliminated battery selector switch

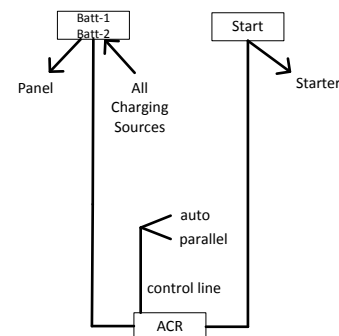

**Wiring diagram for Whimsea (using Blue Seas ACR)**  
No selector switch – only toggle switch on control line  
Acts like normal (left) when control in AUTO  
Acts like BOTH or ALL (left) when control in PARALLEL  
Audio alarm when control in PARALLEL